

## CVM Series to CVD Series Replacement Instructions Single Camera System



Item	Quantity	Part Number	Description
1	1	CVMxxx	Car Vision Monitor
2	1	CVXLPxxMA	Cable
3	1	CVCxxxXL	Car Vision Camera

Original System

2

The following instructions will guide you through the steps required to replace your older Car Vision® system with a new Car Vision® system using the existing cable. Please read and understand all the instructions before proceeding with the installation.

Rer	noving the existing monitor:
	Disconnect Ground from the vehicle battery.
	Unplug the monitor pigtail from the main cable. Note: Some CVM series monitors have removable pigtails, the pigtail needs to be disconnected from the main cable, not the back of the monitor.
	Cut the power (red), ground (black), and reverse trigger (blue) wires about a foot from the monitor.
	Remove the monitor.
Inst	tall the new CVS100M controller:
	Plug the main cable into the CVS100M controller camera connector. Note: The controller can be installed anywhere inside the vehicle a long as it is within the 6 meter length of the CVDC6MA controller to display cable. Refer to the wiring diagram on page 2 for additional information.
	Plug the CVS100MP3M power harness into the controller.
	Plug the CVDC6MA cable into the controller.
	Connect to power by splicing the CVS100MP3M power harness to the existing power wires; red to red, black to black, and blue to blue
Inst	tall the new display and remote:
	Follow the directions on the quick installation guide provided with your new display.
	Attach the CVDC6MA cable to the display's Controller (inside) connector. Refer to the graphic on page 2.
	Connect the CVR100 remote to the display's Remote (outside) connector. Refer to the graphic on page 2.
	Temporarily install the new display and remote.
Inst	tall the new camera:

Test the system and Complete the installation:

- Reconnect the vehicles battery ground.
- ☐ Turn the system on and adjust as needed.

☐ Plug the new camera into the main cable.

☐ Secure the new display, remote, controller and camera.

Remove the existing camera and unplug it from the main cable.



